

TECH TIPS

Service Call:

**Engine shuts down / No power to
gauges**

Tools Needed:

Multi-meter or test light

Model:

6k, 8k & Rev 3 Ten k



Tech Tips Safety Rules



Danger

Failure to obey the instructions and safety rules in the appropriate Operator's Manual and Service Manual for your machine will result in death or serious injury. Many of the hazards identified in the operator's manual are also safety hazards when maintenance and repair procedures are performed.

Do Not Perform Maintenance Unless:

- You are trained and qualified to perform maintenance on this machine.
- You read, understand and obey:
 - manufacturer's instructions and safety rules
 - employer's safety rules and worksite regulations
 - applicable governmental regulations
- You have the appropriate tools, lifting equipment and a suitable workshop.

The information contained in this tech tip is a supplement to the service manual. Consult the appropriate service manual of your machine for safety rules and hazards.

Step 1

Rev 3 Ten k


Two frame leveling cylinders



Step 2


Rev 4 Ten k

One frame leveling cylinder

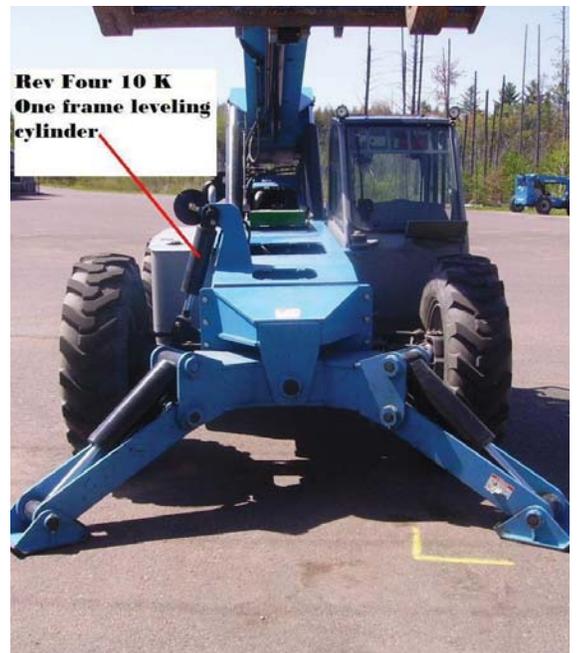

Step 3

Open the fuse panel located under the dash.

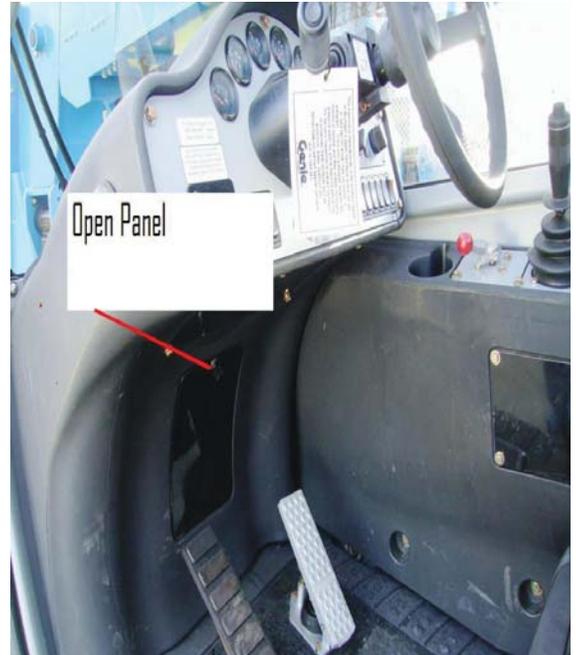

Step 4

Once the fuse panel cover is removed, locate the 40 amp self resetting breaker. (The relay with 2 posts)

With the key in the on position, you should have power on the single 8 gauge red wire of the 40 amp breaker. (bat post)

With the key in the on position, you should also have power on the 8 gauge red and the 8 gauge yellow wire. (aux post)

Note: If you have power on the single 8 gauge red wire (bat) and nothing on the 8 gauge yellow and red wires (aux) replace the defective 40 amp breaker. Part # 123135

If you have any questions please contact the service department at 1-866-684-1457.

